

 


USB 充電伸縮風扇

型號: CF10000W

使用說明書

User Manual

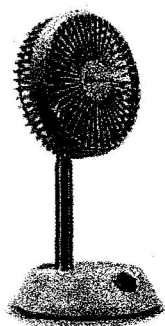

USB充電伸縮風扇

使用前請先細閱使用說明書，特別是警告及重要事項

Please read user manual before use,
especially the Warning and Caution

顧客服務熱線 Customer Service Hotline: (852) 22350333

IMPORTANT SAFETY INSTRUCTIONS


1. If use this product for a long time causes the fan severe fever, which is likely to cause product failure or fire, it is not recommended to use this product continuously for 16hours.
2. Do not use this product in humid atmospheres such as a bathroom. contact with water may cause the failure.
3. If water or solution enters the product, turn off the power immediately and let it dry thoroughly and try again.
4. Do not impact the product or throw it. Repeated impact may cause internal failure.
5. Avoid high temperature and high humidity when keeping the

product for a long time.

6. Do not disassemble, modify, or repair this product arbitrarily.
7. Do not reverse the input and output connectors.
8. Do not change the battery if the voltage is exceeded.
9. When charging is complete, be sure to disconnect the USB connector.
10. Do not throw this product into fire.
11. Do not touch the product with wet hands.
12. Please be careful to prevent use by children.
13. Please use the product at room temperature from 0 to 40 degrees.
14. Do not charge on carpets or comforters highly flammable.
15. If you have trouble charging the main body, please try again with a different charging adapter or USB cable.
16. If liquid gets out of the product and contacts with eyes do not rub it, rinse with clear water and seek medical advice.
17. If there is a strong heat or deformity of the product during charging, stop charging and contact Customer Service.
18. If first or second gear is used during charging, the machine can be charged at normal current. If the machine is running at third or fourth gear, the charging time will be approximately doubled.
19. Please charge the machine in time after using up the battery, and ensure more than half of the battery before long-term storage (charge until the third light is on).

- ***Specifications are subject to change without prior notice.***

OPERATING INSTRUCTIONS

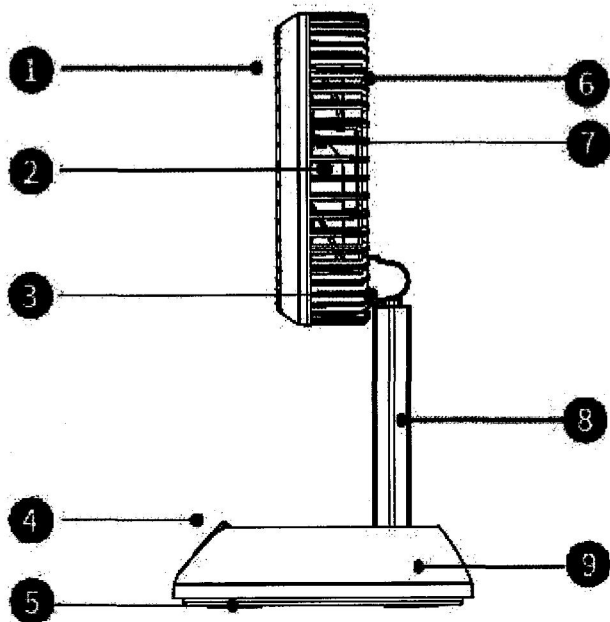


1	Front Shell	4	Rotary Knob	7	Motor
2	Blade	5	Base under the Cover	8	Extension Tube
3	Support Plate	6	Back Cover	9	Back on the Cover

1. Product Feature

Thank you to use our products, our portable storage fan with artistic appearance, novel structure, light and convenient, all round three dimensional air supply, with soft and comfortable wind. It adopted DC motor with low temperature rise, low noise, energy save.

2.Introduction of Operation Panel

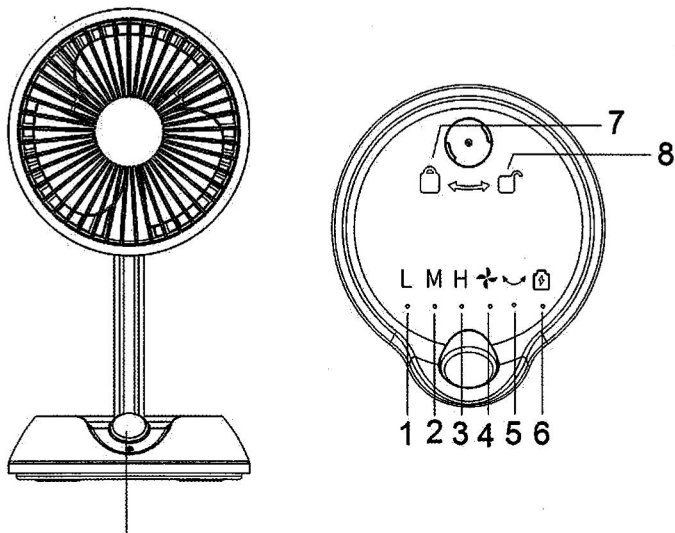

Encoder Operation Knob

1	Low Wind Speed	4	Natural Wind	7	Twist Clockwise
2	Mid-range Speed Wind	5	Oscillation	8	Open Counterclockwise
3	High-grade Wind Speed	6	Electricity prompt		

※Product Configuration:

1.The battery capacity is 10000mAh, and the external power supply is DC5V/2A, the current must meet 2A, otherwise the use will be affected.

2.All functions are realized by encoder(including speed regulation, mode switching and oscillation),The specific description is as follows:

※Operating Instruction:

1、Product Activation

When the product is used for the first time, the factory defaults to self-locking mode in order to prevent power consumption caused by machine collision. Please follow the following two methods to unlock before use:

Press the operation knob three times continuously, all the indicator lights flash once, the buzzer will drip once, the product is activated successfully.

Use the USB charging cable to charge the product. All the indicators will flash once and the buzzer will drip once. The product will be activated successfully.

2、Direction for use:

1.Charge the product under the shutdown state, the buzzer will drip once, all the indicator lights will be on for one second, and the battery indicator light will be off except the battery indicator light, which will display different colors according to the current battery capacity: < 3000mAh is red;3000-7000mah is orange;> 7000mAh is green. If the battery is not full, the charging indicator light will slowly flash with the color corresponding to the current capacity. When the battery is full, it is always bright green.

2.Wind Speed Adjustment: Clockwise rotation of the encoder fan starts to work, default to the traditional mode, the L light on,


each rotation of a grid to increase one gear, 1-2-3 light "L", 4-5-6 light "M", 7-8-9 light "H". The speed of the counterclockwise rotary encoder gradually decreases until it stops rotating, and the corresponding gear indicator light is gradually switched until it is completely extinguished. (the buzzer makes a short sound when L/M/H gear switch)

3. Oscillation: Press the encoder once, oscillation is turn on, the corresponding indicator light will light up; Tap again, it will be closed,


the corresponding indicator light will turn off. The buzzer buzzes briefly once when the state is switched.

4. Natural Wind Mode: Long press the encoder for two seconds, the working mode is switched to the natural wind mode, and the fan provides intermittent air supply; Hold for another two seconds and switch to traditional mode.

4. When the external power is not connected, all indicator lights will be off in shutdown mode.

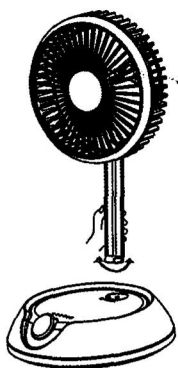

Height
Adjustment

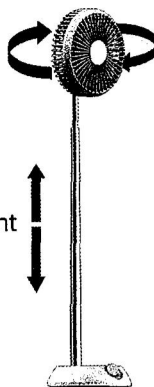

Manually adjust the
angle up-down in 180°

Press the button once,
left-right oscillation
by automatically in 80°

Technical Parameter

Basic Parameter

Product Name	Portable Storage Fan	Battery Capacity	3.7V 10000mAh
Voltage	DC5V/2A	Charging Hour	6-8h
Working Time	6~28h		

Safety and Warnings

Warnings

1. Do not connect or disconnect with wet hands as it will cause short circuit or electronic shock.
2. Please keep the fan in a steady state when in use.
3. Do not disassemble or modify this product by yourself, the inside of the machine is electrified. Do not wash or flush.
4. The USB cable shall not be cut, damaged, pulled, twisted, knotted or weighed.
5. Do not put your fingers or other objects into the fan net frame.
6. Please unplug the USB cable when cleaning and maintaining the product.
7. This product is not suitable for children to use unattended.

Safety Caution

1. Please read the user manual carefully before using.
2. Do not allow children to operate the fan without supervision.
3. Do not place the fan near fire areas or high temperature areas.
4. Do not place the fan in direct radiation of strong light or hot air.
5. Do not use wet hands to operate the fan.
6. Do not use the fan near flammable gases or explosive materials.
7. Do not place the power wire under carpet to avoid fire caused by

power line breakages.

8. Do not cover the fan head when in use.

9. Do not place the fan near wet areas such as bathrooms or swimming pools.

10. If the appliance is not in use for a long period of time, please cut off the power removing the plug from the socket.


11. Any repairs or maintenance on the fan should be carried out by professional maintenance personnel.

12. This product has not been designed for purposes other than the function specified in this manual.

Cleaning and Maintenance

Warning: Before cleaning, please turn off the power switch and remove the plug from the socket.

Do not spray water or spray mist directly on to the fan.

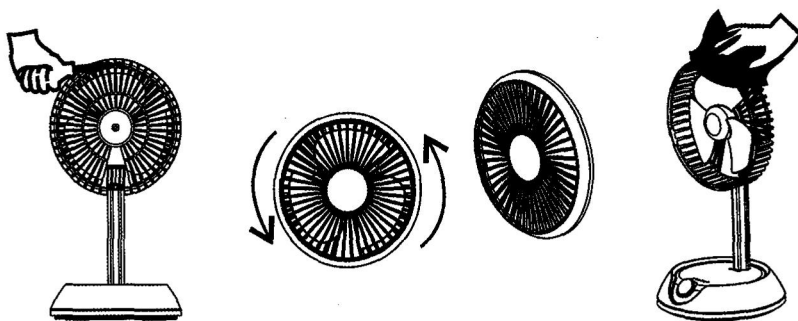

Cleaning of external non detachable parts

Use a soft damp cloth to clean the surface. Only use warm water to

clean.

Storage

If product is not used for a long time, clean it and dry it, then put it into the original packing box and store in a dry place.

If the problem can not be eliminated, please contact our after-sales service department.

Do not disassemble and repair by yourself.


注意事項

1. 若長時間使用本產品導致發熱嚴重，容易造成產品故障或引發火災，建議不要連續使用16小時以上。
2. 此產品禁止在浴室等高濕度的環境下使用。
3. 產品遇水容易產生故障.如果有水或溶液等進入產品內部，請及時斷開電源並將產品至於乾燥地方，待風乾後再使用。
4. 請勿撞擊本產品或進行拋擲動作.若本產品反復經受衝擊，容易引起內部故障。
5. 保管產品時請避開高溫高濕度環境。
6. 若出現自行拆分開或造成本產品的情況，供應商不予以提供維修服務。
7. 請正確連接充電輸入埠和輸出埠。
8. 請勿使用超出額定電壓的設備為本產品進行充電。
9. 產品完成充電後請拔出USB資料線。
10. 請勿將本產品投擲到火源當中。
11. 使用或接觸產品時需保持雙手乾燥。
12. 請勿讓嬰兒小童獨自操作本產品。
13. 請在正常溫度0~40度以下使用本產品。
14. 請勿在毛毯或被子等易燃材質上對本產品進行充電。
15. 如果您在為本產品充電時遇到問題，請使用其他充電器適配器，充電寶或USB數據線再試一次。
16. 如果產品在充電過程中發熱嚴重或出現變形問題，請及時斷電並聯繫客服服務中心。
17. 如充電中使用低檔，機器可按正常電流充電.若在高檔運轉，充電時間大約延長一倍。
18. 本機電池用完後請及時充電，長期存放前請確保電池一半以上的電量。

特別提示：本說明書中圖片技術規格及外型如有變更恕不另行通知，請以產品實物為準

產品元件

產品各部位名稱

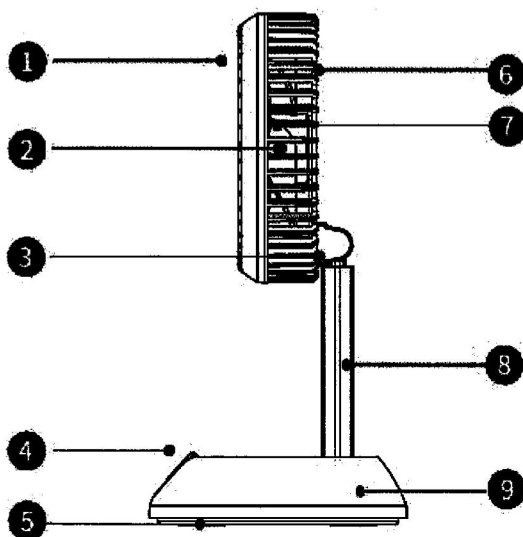

1. 前殼

4. 編碼器旋鈕

7. 電機

2. 風葉

5. 底座下蓋

8. 伸縮管



3. 支架蓋板

6. 後殼

9. 底座上蓋

便攜收納風扇具有外型美觀、結構新穎、輕巧方便、全方位立體送風、並且柔和舒適等特點，採用DC 無刷直流純銅線電機溫升低、噪音小、節能省電，使用壽命持久。夏季消暑降溫理想的產品。

操作面板介紹及使用操作說明

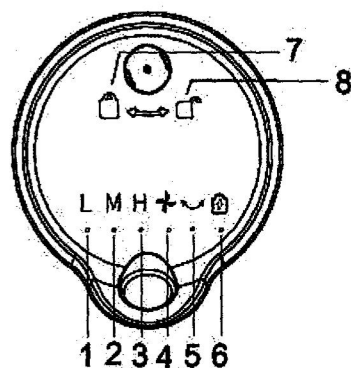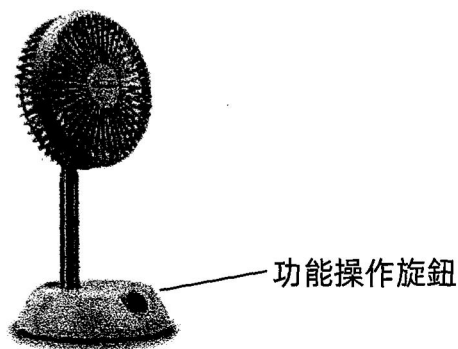

- 1. 低檔風速
- 4. 自然風模式
- 7. 順時針扭緊

- 2. 中檔風速
- 5. 左右搖頭
- 8. 逆時針打開

- 3. 高檔風速
- 6. 電量指示

產品配置：

電池容量為10000mAh，外接供電為DC5V/2A

全部功能通過操作旋鈕實現（包括調速、模式切換和搖頭控制）

操作說明：

初次使用本產品時，為了防止機器誤碰造成耗電，出廠默認為自鎖模式。使用前請按照以下兩種辦法解鎖：

- (1) 連續按操作旋鈕三次，所有指示燈閃一下，蜂鳴器滴一聲，產品開鎖成功。

(2) 使用USB充電線給產品充電，所有指示燈閃一下，蜂鳴器滴一聲，產品開鎖成功。

使用說明

(1) **充電功能**:關機狀態下給產品充電，蜂鳴器“滴”一聲，全部指示燈亮起一秒後除電池指示燈外熄滅，電池指示燈根據當前電池容量顯示不同顏色： $< 3000\text{mAh}$ 為紅色； $3000-7000\text{mAh}$ 為橙色； $> 7000\text{mAh}$ 為綠色。


若電池未充滿時，充電指示燈以當前容量對應的顏色做呼吸慢閃；電池滿電情況下為綠色常亮。

(2) **風速調節**:順時針旋轉旋鈕風扇則開始工作，默認傳統模式，L檔指示燈亮起，每旋轉一格增加一檔，1-2-3檔指示燈為“L”，4-5-6檔指示燈為“M”，7-8-9檔指示燈為“H”。逆時針旋轉旋鈕轉速逐漸減小直至停止轉動，對應檔位指示燈則逐漸切換直至全部熄滅。L/M/H檔位切換時蜂鳴器短鳴一次。

(3) **搖頭功能**:輕按旋鈕一次，左右搖頭開啟，對應指示燈亮起；再次輕按，左右搖頭關閉，對應指示燈熄滅。狀態切換時蜂鳴器短鳴一次。

(4) **自然風模式**:長按旋鈕兩秒，工作模式切換到自然風模式，風扇做間斷性送風；再次長按兩秒，則切換為傳統模式。模式切換時蜂鳴器短鳴一次。

(5) 未接入外部電源時，關機狀態下，所有指示燈均處於熄滅狀態。

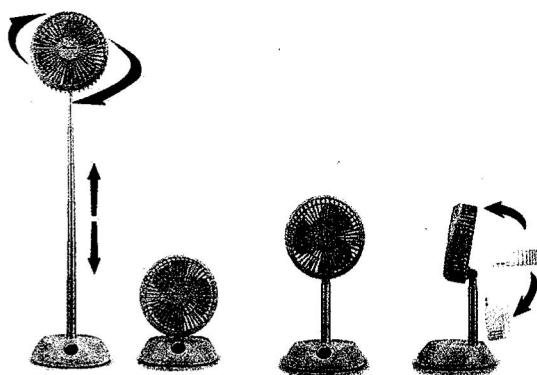

角度調節注意事項


若強行進行其他角度方向的旋轉容易導致產品損壞

安全網拆卸&清潔維護注意事項

請仔細確認安裝指示標。

上下裝配指示線需對準並保持直線才是緊密扣合狀態。

清完灰塵或異物後,請按照拆卸步驟的逆向順序進行安裝並使用。

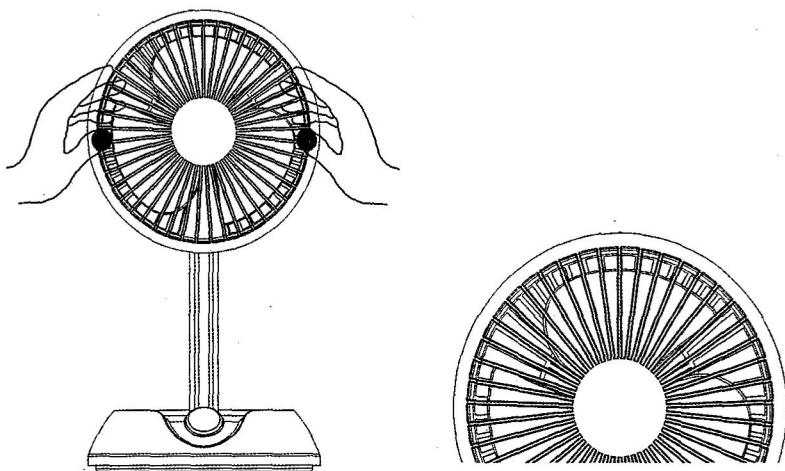

產品規格

額定電壓: DC5V

額定電流: DC2A

額定功率: 10W

充電電流: 3.7V

電池容量: 10000mAh

使用時間: 最大風速 6-8 小時-最小風速 28 小時

(如有左右轉動則使用電量會較多)

充電時間: 6-8 小時 (首次使用建議先充電)

產品處置



本產品按照歐盟頒布的廢電器及電子設備（WEEE）指令 2012/19/EU，確保減少電器和電子設備中有害物質的使用以及正確處置廢物設備或其包裝上印有帶叉的垃圾箱符號，表示在產品的使用壽命結束時，必須將它與其他垃圾分開處理。因此，

用戶必須將廢棄的產品帶到適當的電器和電子廢物收集中心。如果以一換一方式更換同一型號的新產品，請將舊產品退還給經銷商。適當的隔離式收集，用於隨後的回收、處理和環保處置，可有助於防止對環境和人類健康的損害，並鼓勵將產品材料回收再用和/或循環再造。用戶不正確處置產品，將會依照現行法律進行處罰。