## **Touch Panel Manual**

## Power Button (at the bottom right corner of the Touch Panel)

Power Button in Red Colour – Off mode Press the power button to turn on the panel.



Power Button in White Colour – On mode Press the power button to switch to stand-by mode. Long press the power button to turn it off.



Power Button flashes in Red and White – Stand-by mode Touch the screen to activate the panel.



Select "HDMI1" to switch to TV channels.						
	111	1110	e an			
	Commor	n settings		••		
	0	0				
• Android	• HDMI1	• HDMI2	• HDMI3			
	(1111)					
• Type-C	• VGA					
G —	• ¢	⊂]× -	<b>—</b> (	]»		
Check if the TV modem is	s on. You m	ay change tl	he TV chann	els with the	modem.	
Channel		Volume	٦	On/off	7	
button		button		button		
	(	114			_	
	E 0 3 3		6			
	141010111111	HO DIGITAL REP	SEWER RUCH			
You may return to the To	ouch Panel r	nainpage by	<pre>clicking the</pre>	Home Icon		
			9			
¢		(				
		(				
			0			
			<b></b>			
			3			

L

## To Share Screen to the Touch Panel

(1) Share screen via EShare (Your device can connect to the internet while using EShare)

Touch the arrow on the right hand side of the touch panel and select the circled icon.



Select "EsharePro"





After Installation, open the EShare programme on your device. Click "Connect" to link to the Touch Panel of your hall.

		Device Liet	C
		Device List	
	XueMin Hall 172.16.178.138	Connect	$\mathbf{)}$
		Enter IP or PIN code to connect	
£ġ		Network: HH-Freshmen	
4100			

