

Operation Manual and Useful Tips




1. Put your shoes into the shoe-washing machine;
2. Add **foamless** detergent*.



3. Close the lid of the washer properly.



4. Pay for the shoe-washing machine by octopus card or ePurse account. During the free trial period, no money will be deducted from your card/account.

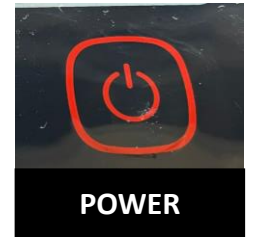

5. Press a) "POWER" button and b) "START/ PAUSE" button to start your wash cycle.

***WARNING: Only foamless detergent is allowed.** Foaming produced by non-foamless detergent may leak out and cause damages to the shoe-washing machine. Students will be liable to the repair cost for the damages caused by using non-foamless detergent.